

Alliance

8L DIGITAL AIR FRYER

INSTRUCTION MANUAL



1700W



7 Cooking
Functions



Digital touch
control



Adjustable
temperature
80°C - 200°C



AHA-AF80002D

CONTENTS

Save these Instructions & Important safeguards.....	2
Introduction.....	3
Important	4
Using The Appliance.....	5
Control panel instructions.....	6
Cleaning.....	7
Troubleshooting.....	8
Environmentally friendly disposal.....	9

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE





SAVE THESE INSTRUCTION

This appliance is intended for domestic use and not for the following:

- Industrial use

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces.
3. To protect against electric shock do not immerse cord, plugs, or base in water or other liquid.
4.  **WARNING:** This electrical appliance contains a heating function. Surfaces unit is place on can develop high temperatures. Since temperatures are differently perceived by different persons, this equipment should be used with  **CAUTION**.
Only use intended handles and gripping surfaces to open unit as they are composed of heat resistant material. It is advised to use oven gloves when removing hot inner items or food.
Allow unit and surfaces time to the cool down before touching unit.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid a hazard.
7. Do not use utensils, attachment or accessories that are not intended for Air fryer use as it may lead to injury .
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
13. Do not use appliance for any other than its intended use.
14. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

INTRODUCTION

This Hot-air fryer provides an easy and healthy way of preparing your favorite ingredients. By using hot rapid air circulation and a top grill, it is able to make numerous dishes. The best part is that the Hot-air fryer heats food at all directions and most of the ingredients do not need any oil.

TECHNICAL DATA:

 
 
 
VOLTAGE: 220-240V - 50/60HZ

WATTAGE: 1700 WATTS

CAPACITY OF BASKET: 7.8LITRE

ADJUSTABLE TEMPERATURE: 60°C-200°C

TIMER (0-60 MIN)

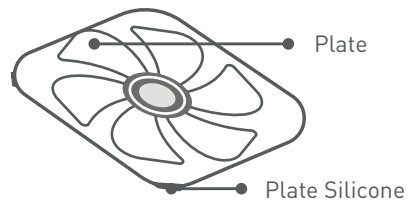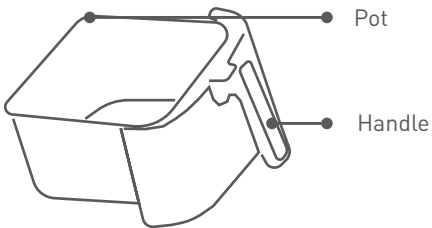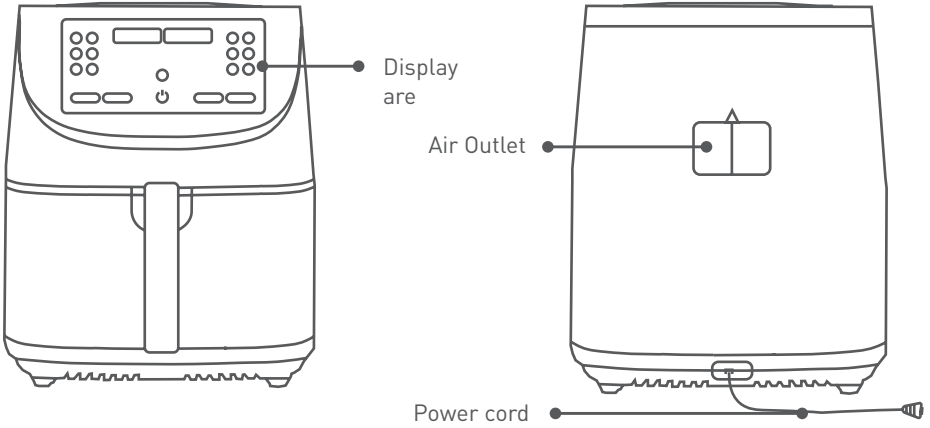

IMPORTANT

DANGER

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - Never immerse the housing, which contains electrical components and the heating elements, in water nor rinse it under the tap.
 - Do not let any water or other liquid enter the appliance to prevent electric shock.
 - Always put the ingredients to be fried in the basket, to prevent it from coming into contact with the heating elements.
 - Do not cover the air inlet and the air outlet openings while the appliance is operating.
 - Do not fill the pot with oil as this may cause a fire hazard.
 - Never touch the inside of the appliance while it is operating.
- The temperature of accessible surfaces may be high when the appliance is in use.

WARNING

- Check if the voltage indicated on the appliance fits the local mains voltage.
- Do not use the appliance if there is any damage on plug, mains cord or other parts.
- Do not go to any unauthorized person to replace or fix damaged main cord.
- Keep the mains cord away from hot surfaces.
- Do not plug in the appliance or operate the control panel with wet hands.
- Do not place the appliance against a wall or against other appliances. Leave at least 10cm free space on the back and sides and 10cm free space above the appliance.
- Do not place anything on top of the appliance.
- Do not use the appliance for any other purpose than described in this manual.
- Do not let the appliance operate unattended.
- During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- Also be careful of hot steam and air when you remove the pot from the appliance.
- Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop before you remove the pot from the appliance.

CAUTION

- Ensure the appliance is placed on a horizontal, even and stable surface.
- This appliance is designed for household use only and not recommended for use in environments such as staff kitchens, farms, motels, hotels and other non-residential environments.
- If the appliance is used for professional or semi-professional purposes or not in accordance with the instructions in the user manual, the guarantee becomes invalid and any liability for damage is waived.
- Always unplug the appliance while not using.
- The appliance needs approximately 30 minutes to cool down for before it can be safely handled or cleaned.

BEFORE FIRST USE

1. Remove all packaging materials.
2. Remove any stickers or labels from the appliance.
3. Thoroughly clean the basket and pot with hot water, some washing-up liquid and a non-abrasive sponge.
4. Wipe inside and outside of the appliance with a moist cloth.
5. This is an oil-free fryer that works on hot air. Do not fill the pot with oil or frying fat directly.

NOTICE: When your air fryer is heated for the first time, it may emit slight smoke or odour. This is normal with many heating appliances. This does not affect the safety of your appliance.

PREPARING FOR USE

1. Place the appliance on a stable, flat and even surface.
Do not place the appliance on non-heat-resistant surface.

USING THE APPLIANCE

This oil-free appliance can prepare a large range of ingredients.

Hot air frying

 
1. Connect the mains plug into an earthed wall socket.
2. Carefully pull the pot out of the Hot-air fryer.
3. Put the ingredients in the pot.
4. Slide the pot back into the Hot-air fryer.

Noting to carefully align with the guides in the body of the fryer.

⚠ CAUTION: Do not touch the pot during and for 30 minutes after use, as it gets very hot. Remove food from the pot by using the heat resistance handle.

5. Determine the required preparation time and temperature for the ingredients.
6. Some ingredients require shaking halfway through the preparation time. To shake the ingredients, pull the pot out of the appliance by the handle and shake it. Then slide the pot back into the air fryer.
7. When you hear the timer buzzer, the set preparation time has elapsed. Pull the pot out of the appliance.
8. Check if the ingredients are ready or not.
If the ingredients are not ready yet, simply slide the pot back into the appliance and set the timer to a few extra minutes.
9. Empty the Pot into a bowl or onto a plate.
10. After cooking a batch of ingredients the Hot-air fryer is instantly ready for preparing another batch. No pre heating time is needed.

CONTROL PANEL INSTRUCTIONS

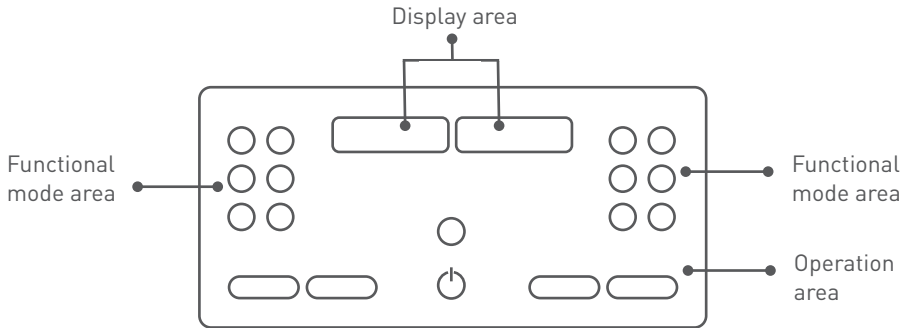

OPERATION INSTRUCTIONS:

1. NO MENU MODE.

-Power Key - Power on and click,

At this point the icon lights up, select the time and temperature required.
Then press start.

The machine starts to run normally.

Time and temperature can be adjusted before and during cooking by just adjusting the "+/-" Click again

All lights go out when the time selected runs out but the motor continues to run for 15 seconds.

The buzzer sounds 5 times after the motor stops.

Unit enters standby mode ready to be programmed.

2. MENU MODE

Power on and click

Click to jump to the next menu.

Display buttons appear in sequence.

Keep pressing to jump to the next option until you find the option you require.

After selecting the recipe you like, click on , START.

The Machine starts running.

The buzzer sounds 5 times after the selected program is finished.

The motor continues to run for 15 Secs before switching off.

Unit then goes into standby mode ready to be programmed.

CLEANING

- 1 Before cleaning the air fryer, disconnect and unplug the power supply and wait until the product has cooled completely.
- 2 Wipe the outside of the appliance with a moist cloth.
- 3 Clean the pot and basket with hot water, some washing-up liquid and a non-abrasive sponge.

You can use degreasing liquid to remove any remaining dirt.

Tip: If dirt is stuck to the basket or the bottom of the pot, fill the pot with hot water with some washing-up liquid. Put the basket in the pot and let the pot and the basket soak for approximately 10 minutes.

- 4 Clean the inside of the appliance with hot water and non-abrasive sponge.
- 5 Clean the heating element with a cleaning brush to remove any food residues.

STORAGE

1. Unplug the appliance and let it cool down.
2. Make sure all parts are clean and dry.

ENVIRONMENT

Do not throw away the appliance with the normal household waste when it is exhausted, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

GUARANTEE AND SERVICE

Please note that this appliance carries a 2-year warranty and has a 7-day OUT OF BOX FAILURE refund policy. However, the following terms and conditions apply.

- If you have a problem, please contact retailer who you purchased product from. They will need to submit an online claim as the refund and exchange will be processed through their account.
- Refunds will only be proceeded if customer has a valid receipt or proof of purchase, and the unit is returned in original packaging.


Please ensure that they have logged a service call request on the following link, in order for us to start processing the claim.
<http://retail.mideasouthafrica/submit-service-request/>

Should you require any additional information, kindly send email to service@midearetail.co.za or visit www.allianceafrica.co.za for more information.

TROUBLESHOOTING

Problem	Possible cause	Solution
The Hot-air fryer does not work	The appliance is not plugged in	Put the mains plug in an earthed wall socket.
	You have not set the timer	Set the timer key to the required preparation time to switch on the appliance.
The ingredients fried with the air fryer are not done.	The amount of ingredients in the basket is too big.	Put smaller batches of ingredients in the basket. Smaller batches are fried more evenly.
	The set temperature is too low.	Set the temperature key to the required temperature setting.
	The preparation time is too short.	Set the timer to the required preparation time.
The ingredients are fried unevenly in the air fryer.	Certain types of ingredients need to be shaken halfway through the preparation time.	Ingredients that lie on top of or across each other (e.g. fries) need to be shaken halfway through the preparation time.
I cannot slide the pan into the appliance properly	There are too much ingredients in the basket.	Do not fill the basket beyond the MAX indication.
Fresh fries are fried unevenly in the air fryer.	The pot still contains grease residues from previous use.	White smoke is caused by grease heating up in the pan. make sure you clean the pan properly after each use.
	You did not use the right potato type.	Use fresh potatoes and make sure they stay firm during frying.
Fresh fries are not crispy when they come out of the air fryer.	You did not rinse the potato sticks properly before you fried them.	Rinse the potato sticks properly to remove starch from the outside of the sticks.
	The crispiness of the fries depends on the amount of oil and water in the fries.	Make sure you dry the potato sticks properly before you add the oil.
		Cut the potato sticks smaller for a crispier result.
		Add slightly more oil for a crispier result.

ENVIRONMENTALLY FRIENDLY DISPOSAL

	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>
---	---

CUSTOMER SUPPORT

www.allianceafrica.co.za

